

7200 CRUSH

Premium "Green" Moisture Control MS Polymer Wood Flooring Adhesive

OWNED & OPERATED
IN USA



DriTac 7200 Crush is a single-component, premium "green" moisture control MS polymer wood flooring adhesive. It offers unlimited subfloor moisture control with no testing required, a lifetime bond warranty and a 10-year moisture warranty for multi-ply engineered plank wood flooring installations. Crush is extremely easy to clean off the surface of hardwood flooring wet or dry.

ATTRIBUTES

- Lifetime Bond Warranty
- Easy to Clean When Wet or Dry
- 10-Year Moisture Warranty
- Unlimited Wood Plank: Length/Width/Thickness
- Zero Isocyanates
- Unlimited Subfloor Moisture Control for Engineered Plank Only
- No Testing Required for Engineered Plank Only
- Controls MVER up to 15 lbs./85% RH for Solid Wood & Bamboo
- Contains No Water
- One-Day, One-Step System
- Helps Contribute to LEED Credits

FLOORING TYPES

- Multi-Ply Engineered Plank
- Exotic Multi-Ply Engineered Plank
- Acrylic Impregnated Wood
- Plain-Back Parquet
- Solid Wood Plank
- Bamboo
- Recycled Rubber Flooring
- Cork/Rubber/Foam Underlayment


AVAILABLE CONTAINER SIZE

- 4-Gallon Pail

Green Label Plus, Indoor Air Quality (IAQ) Certified!



4-IN-1 SYSTEM SOLUTIONS

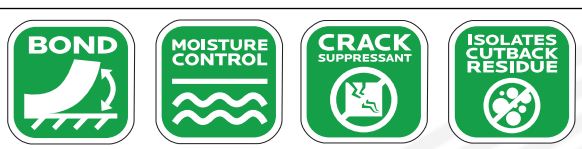

DriTac
Adhering to Excellence

TECHNICAL DATA SHEET

INSTRUCTIONS

Read and understand all information below before installation. If there are any questions, please call DriTac Flooring Products, Technical Services at (973) 614-9000.

GENERAL CHARACTERISTICS

DriTac 7200 has been formulated for the interior installation of multi-ply engineered plank, solid plank, bamboo, exotic wood, acrylic impregnated wood, parquet, plywood, recycled rubber flooring and cork/rubber/foam underlayments over approved substrates. Carefully follow the flooring manufacturer's instructions. The time it takes for the adhesive to cure is related to temperature, humidity, porosity of the subfloor, ventilation and air movement.

APPROVED SUBFLOORS

Applies for Adhesive Bond Only/Over Cutback Adhesive: Plywood; Terrazzo and ceramic tile; Concrete- above, on or below grade in the absence of excessive moisture and alkalinity; Underlayment grade O.S.B.; Vinyl tile flooring coated with vinyl primer; Non-cushioned fully adhered sheet vinyl coated with vinyl primer; Light weight concrete/gypcrete (coated with latex primer), per ASTM F2419. Note: If DriTac's list of approved subfloors is different from the flooring manufacturer, DriTac requires that you must follow the flooring manufacturer's recommendation. **Applies for 4-in-1 System Only/Over Cutback Adhesive:** Concrete- above or on-grade and below-grade only in the absence of excessive moisture/alkalinity; Light weight concretes (coated with latex primer); Gypcrete (Above-grade when coated with an approved latex primer).

SUBFLOOR REQUIREMENTS

Applies for Adhesive Bond Only & 4-in-1 System: Clean - It is required that all concrete, sheet vinyl, vinyl tile, terrazzo and ceramic tile sub floors be scoured with #3-1/2 open coat sandpaper to remove dirt or any surface contamination such as paint, grease, oil, sealers, waxes, curing compounds and glass-like concrete. DriTac 7200 adhesive should not be used over these substances. Sweep or vacuum the subfloor before installation. **Preparation** - All floors should be flat to within 3/16" in 10 ft. or 1/8" in 6 ft. Not properly flattening the substrate to industry standards may result in voids in the moisture control membrane when this product is used as a 4-in-1 system. This can allow moisture to adversely affect the wood flooring and is not covered by the substrate moisture warranty. Use over old asphalt cutback adhesive residue that has been scraped to the concrete is allowed. **Smooth and Flat** - Remove any high spots with a terrazzo grinder or Carborundum stone and fill any low spots with a good quality cementitious-based latex patch mix.

CONCRETE SUBFLOORS

Applies for Adhesive Bond Only & 4-in-1 System: Concrete should be at least 60 days old. Inspect the concrete before installing flooring over it. First inspect for any wetness at the base of the drywall or for visible signs of moisture on the concrete. Second, test for moisture (no testing required for engineered plank installations). Use a Calcium Chloride Test for reliable concrete testing. When used as a 4-in-1 system, DriTac 7200 offers unlimited concrete subfloor moisture control for all engineered plank installations and up to 15 lbs/1,000 ft²/24 hrs, per the ASTM F1869 Calcium Chloride Method Test and up to 85% Relative Humidity (RH), per the ASTM F2170 Relative Humidity Test for all solid wood and bamboo flooring installations, when all manufacturer installation recommendations are followed.

When used as an adhesive only, DriTac 7200 is warranted for up to 3 lbs/1,000 ft²/24 hrs, per the ASTM F1869 Calcium Chloride Method Test and up to 75% Relative Humidity (RH), per the ASTM F2170 Relative Humidity Test. Many wood flooring products can be installed over lightweight concrete (less than 3000 PSI) or gypcrete, providing the surface is properly prepared. Follow the concrete/gypcrete manufacturer's recommendation for the application of a surface hardener/primer. Radiant heated subfloors should be turned off 24 hours prior to, during and after installation to prevent premature curing of the adhesive.

SHEET VINYL, VINYL TILE, TERRAZZO SUBFLOORS

Applies for Adhesive Bond Only: All tiles or sheet goods must be firmly bonded to the subfloor. Make certain the sheet vinyl is a full spread system, perimeter installations are unacceptable. If materials are poorly bonded to the subfloor remove them down to the original subfloor and sand or scrape off all traces of old adhesive. Do not glue over heavy cushioned (1/4") sheet goods or rubber tile. New sheet vinyl or vinyl tile must be coated with a primer. Old vinyl must be sanded first, then cleaned with TSP or equivalent cleaner to remove all wax and other coatings. CAUTION: Sanding or removing tile flooring containing asbestos is a health hazard. If there is any doubt concerning the contents, professional advice should be sought. Asbestos has been labeled a carcinogen.

PLYWOOD, ORIENTED STRAND BOARD (OSB) OR WOOD SUBFLOORS

Applies for Adhesive Bond Only: Before installing over any one of these subfloors, test for moisture using a reliable moisture meter such as the Tramex Wood Moisture Meter or equivalent. The moisture content should not exceed 12%. If it is over 12%, either wait until the subfloor is drier or stabilize the subfloor with an additional layer of 1/4" plywood. All joints in subflooring materials should have 1/8" expansion space around all panels. If expansion space is not present, cut around and through the panel joints with a circular saw. When installing a plywood sheet subfloor over concrete, score 3/8" deep every 8 to 10 inches on 4' x 4' sheets of 3/4" exterior. Set 4' x 4' sheets into wet adhesive. Apply weight as necessary and allow to cure overnight. **CAUTION: Subfloors with high moisture content may shrink at a later date causing cracks to appear in the wood floor.**

TECHNICAL DATA SHEET

WOOD INSTALLATIONS

Applies for Adhesive Bond Only & 4-in-1 System: Provide adequate ventilation and air movement. Ideally, installation should not begin until all wet work (painting, dry wall materials, etc.) is complete and the heating/air conditioning system is in operation. Jobsite temperature should be between 55 and 90° Fahrenheit. Trowel only the amount of adhesive that can be covered in 30 minutes. Install wood flooring into wet adhesive only. Secure the first row with edge blocking or top nail with finishing or sprig nails. Tighten side and end joints and reduce scooting by securing the flooring together with painters tape (Check with wood manufacturer for list of approved tape manufacturers). Occasionally check for transfer to back of wood flooring. If adhesive transfer is less than 90% to the back of the plank scrape up the adhesive and apply fresh DriTac 7200. When using this product as a 4-in-1 system, a monolithic membrane must be formed and adhesive transfer must be 100%. Apply weight to any bowed flooring and all floor mounted trim moldings. Remove all defective or unsightly boards immediately. The adhesive is very tenacious and flooring is difficult to remove after the adhesive has cured. Roll the floor with a 100 lb. roller every two to three hours during and immediately after installation.

RECYCLED RUBBER FLOORING INSTALLATIONS

Applies for Adhesive Bond Only: This product is approved for installing all recycled rubber flooring products that are recommended for installation with a moisture cure MS polymer adhesive. Check with the flooring manufacturer for installation recommendations.

APPROVED CORK/RUBBER/FOAM UNDERLAYMENT INSTALLATIONS

Applies for Adhesive Bond Only:

- Cut underlayment to length and lay loosely over the area to be installed. Both ends of the roll must curl down towards the subfloor, if they curl up, turn the underlayment over. Butt the underlayment directly against the isolation barrier already installed.
- Pull the loose laid material back at least half the length of the roll. Using the recommended trowel apply DriTac 7200 to the subfloor. Place the underlayment into the adhesive immediately. Upon placing underlayment into the adhesive, roll both ways with a 100 lb roller. Repeat the installation for the other half of the subfloor, insuring all joints are butted together tightly.
- Allow adhesive to set prior to proceeding to flooring installation. It is highly recommended to allow at least 18 hours prior to installation of the flooring.

NAIL ASSIST INSTALLATIONS

Applies for Adhesive Bond Only: This adhesive can be used for nail assist installations, when recommended in writing by the wood flooring manufacturer.

CLEAN UP

Removing adhesive from the surface of the wood before it cures will help provide an easier installation process. Once DriTac 7200 hardens on the surface of the wood, the adhesive should be cleaned with a dry clean, non-abrasive cloth followed by a light buffing motion with a second clean non-abrasive cloth.

PRECAUTIONS

- May cause skin and/or eye irritation. May cause dermatitis and allergic responses. Potential skin and/or respiratory sensitizer. Inhalation of vapors may cause irritation and intoxication with headaches, dizziness, and nausea. See Safety Data Sheets for further information. Ingestion may cause irritation.
- KEEP OUT OF REACH OF CHILDREN. Avoid contact with skin, eyes and clothing. Wash thoroughly after handling. Avoid breathing vapors. Use only with adequate ventilation. Use impervious gloves, eye protection and if TLV is exceeded or if used in a poorly ventilated area, use NIOSH/MSMA approved respiratory protection in accordance with applicable federal, state and local regulations. DO NOT take internally. Empty container may contain hazardous residues.

LIMITATIONS

Applies for Adhesive Bond Only & 4-in-1 System: DriTac 7200 adhesive is affected by humidity more than temperature. High humidity will cause the adhesive to cure faster and low humidity will slow the curing process. Do not use on wet, contaminated or friable substrates. Only engineered plank can be installed below grade due to the limitations in solid wood flooring such as lack of dimensional stability. After 8 to 12 hours, light traffic is allowed. Do not use as a leveling material. Do not use with gypsum based patches or underlayments in wet or moist environments. This product requires a cementitious-based patching compound that is approved for use in high moisture applications when installing DriTac 7200 in a wet or moist environment. DriTac 7200 can be applied over old asphalt cutback adhesive residue as long as the adhesive ridges and raised residue have been completely removed from the subfloor with only minor stains remaining.

FIRST AID

In case of eye contact, flush thoroughly with water for at least 15 minutes. SEEK IMMEDIATE MEDICAL ATTENTION. In case of skin contact, wash affected areas with soap and water. If irritation persists, SEEK MEDICAL ATTENTION. Remove and wash all contaminated clothing. If inhalation causes physical discomfort, remove to fresh air. If discomfort persists, SEEK MEDICAL ATTENTION.

TECHNICAL DATA SHEET

SHELF LIFE

12 months when stored at 75° F and 50% relative humidity.


REUSE OF PARTIAL CONTAINERS




Cover adhesive in the pail with a plastic trash bag or two layers of plastic film. Put lid on tightly. Turn over pail. This will seal contents from outside air. To open container, take off lid, cut plastic and remove thin layer of cured adhesive on surface.

INSTALLER RESPONSIBILITY







These directions are general guidelines for flooring installations. It is the responsibility of the installer to determine proper drying time of the adhesive, trowel size to be used and acceptability of subfloor conditions. Installations must also be in accordance with flooring manufacturers recommendations. Only flooring that is approved for glue down installations by the flooring manufacturer can be used with DriTac 7200. Floors installed with DriTac 7200 are not warranted against damage caused by wet mopping, flooding, plumbing leaks or other extraordinary circumstances. For any installation not herein recommended, contact DriTac Flooring Products LLC before proceeding.

WARRANTY

This product is warranted to be free of manufacturing defects. If a manufacturing defect is found within one year from the date of purchase, such defective product shall be replaced. No warranty either expressed or implied is made regarding the performance of this product since conditions under which these goods are transported, stored, used or applied are beyond our control. This warranty is made in lieu of all other warranties either expressed or implied and the seller shall not be responsible for consequential, incidental, special or other damages no matter what the cause. GHS label elements: Hazard pictograms:  Signal word: Warning. Hazard statements: Causes skin irritation. Causes serious eye irritation. May cause an allergic skin reaction. May cause respiratory irritation. Precautionary statements: Wear protective gloves: butyl rubber, Ethyl vinyl alcohol laminate (EVAL), nitrile rubber, neoprene rubber. Wear eye and face protection. Wear protective clothing. Avoid breathing vapor. Avoid release to the environment. Wash hands thoroughly after handling. Collect spillage.

When Used as a 4-in-1 System		
Floor Type	DriTac Trowel	Coverage
Multi-ply engineered plank up to 1/2" thick and plain-back parquet	 TR-10 1/4" x 3/16" V Notch	30-35 sq. feet/gal.
Multi-ply engineered plank, solid plank and bamboo (vertical/horizontal only) up to 5/8" in thickness	 TR-11 1/4" x 1/4" V Notch	30 sq. feet/gal.
Multi-ply engineered plank, solid plank and bamboo (vertical/horizontal only) greater than 5/8" in thickness	 TR-12 1/2" x 15/32" V Notch	20 sq. feet/gal.

Trowel diagrams are not to scale. Use DriTac 7200 with a properly notched trowel. Each trowel can spread a maximum of 800 sq. ft. of DriTac 7200. Once 800 sq. ft. is reached, a new trowel is required. Note: Using a trowel other than the trowel recommended, voids the warranty. All square footage rates are estimated. Rates will vary based on substrate condition and the angle the trowel is held to the subfloor. DriTac Warranties do not cover problems caused by improper installation. Follow flooring manufacturers written installation instructions.

TROWELS AND COVERAGE		
When Used as Adhesive Only		
Floor Type	DriTac Trowel	Coverage
Multi-Ply Engineered Plank 3/8" up to 1/2" and 5/16" to 3/8" solid strip	 TR-6 3/16" x 3/16" x 5/32" V Notch	50 sq. feet/gal.
5/16" Solid Parquet, 1/4" Engineered Plank	 TR-5 1/8" x 1/8" x 1/8" Square Notch	80 sq. feet/gal.
3/4" Solid Wood Plank/ Shorts, 4' x 4' Plywood	 TR-4 1/4" x 1/4" x 1/4" Square Notch	30 sq. feet/gal.
Greater than 1/2" Engineered Plank, 3/4" Parquet and Solid Plank greater than 3/8" up to 9/16"	 TR-7 1/4" x 1/4" x 1/8" Square Notch	35 sq. feet/gal.
Bamboo up to 5/8" in thickness	 TR-9 3/16" x 3/16" x 3/16" Square Notch	35 sq. feet/gal.
Recycled Rubber Flooring over Non-Porous Substrates	 TR-15 3/32" x 3/32" x 3/32" Square Notch	100 sq. feet/gal.

Trowels diagrams are not to scale. Use DriTac 7200 adhesive with a properly notched trowel. All square footage rates are estimated. Rates will vary based on substrate condition and the angle the trowel is held to the subfloor. Failure to properly flatten the subfloor may result in hollow spots. DriTac warranties do not cover problems caused by improper use of installation products. Follow flooring manufacturer's written installation instructions.